

dump waveform

1. dump memory & data array

方式一：

```
setenv NOVAS_FSDB_MDA 1
```

方式二：

```
$fsdbDumpvars(0,top,"+mda");
```

1.1 skip cell instance

NOTE: The primitive cells compiled through the simulator compile option -v or -y are treated as library cells.

NOTE: To skip cell instances, use the NOVAS_FSDB_SKIP_CELL_INSTANCE environment variable or the +fsdb+skip_cell_instance=mode runtime option. For example:

```
simv +fsdb+skip_cell_instance=1
```