

zynq

1. 使用axi pkg ip

当使用axi接口的自定义IP时，打包的时候可能要记得在.h文件中添加如下内容

```
#include "xil_types.h"
#include "xstatus.h"
#include "xil_io.h"
```

不然可能在使用define macro访问AXI IP内容的register时，会出现c编译错误。 -- 会不会添加一个axi gpio ip也能解决，或者手动在程序.h文件里面把#include “xil_io.h”给加上。

2. petalinux

2.1 create project

```
source /xilinx/settings.sh

petalinux-create -t project --template zynq -n xxx_name
petalinux-config --get-hw-description .
```

2.2 create modules

相当于创建linux模块驱动

```
petalinux-create -t modules -n xxx_module --enable
```

2.3 create app

创建一个linux平台下的app可执行程序

```
petalinux-create -t apps -n xxx_app --enable
```

然后进入recipes-apps/xxx_app目录，修改files/xxx_app.c文件，默认是一个hello world!打印程序。

2.4 build

```
petalinux-build -c rootfs
petalinux-build -c xxx_module
petalinux-build -c xxx_app -x do_install
```

```
petalinux-build
```

2.5 app单独编译&调试

```
petalinux-build -c xxx_app -x do_compile # 对指定app进行编译, 编译后生成的app可执行文件在以下位置
ls build/tmp/work/cortexa9hf-neon-xilinx-linux-gnueabi/myapp3/1.0-r0/myapp3

# 然后将此文件通过scp的方式copy到zynq设备, 修改权限chmod 777 ./myapp3 执行程序./myapp3
# 这样的方式不用很次app修改后都烧写到flash 通过scp的方式加快app开发调试速度。
```

2.6 package to BOOT.BIN

```
petalinux-package --boot --fsbl zynq_fsbl.elf --u-boot --kernel --fpga system.bit --force
# --boot 打包成BOOT.BIN文件
# -- 输入fsdb文件
# --u-boot 输入默认u-boot文件, 一般是指u-boot.elf
# --kernel 输入petalinux内核, 默认是指image.ub
# --fpga 指定FPGA bits文件。
# 一般是建议先不用--kernel选项生成BOOT.BIN文件, 然后将BOOT.BIN文件和image.ub一起copy到SD卡, 从SD卡启动看看程序效果, 程序稳定后可以再考虑弄成为flash启动, 这样调试速度会快一些。
```

2.7 一个简单的驱动开发例程——GPIO流水灯(Petalinux部分)

<https://blog.csdn.net/u013029731/article/details/85042431/>

2.8 实现app开机启动

参考ug1144, Ch.7: Customizing the Rootfs

参考: https://blog.csdn.net/qq_37775990/article/details/126951572

实现开机启动

本章节内容参考UG1144

1) 创建myapp-init应用

```
cd <plnx-proj-root>
```

```
petalinux-create -t apps --template install -n myapp-init --enable
```

2) 修改myapp-init.bb配置文件

配置文件的位置在：

project-spec/meta-user/recipes-apps/myapp-init/myapp-init.bb

修改文件内容为：

```
#
# This file is the myapp-init recipe.
#
SUMMARY = "Simple myapp-init application"
SECTION = "PETALINUX/apps"
LICENSE = "MIT"
LIC_FILES_CHKSUM = "file://${COMMON_LICENSE_DIR}/
MIT;md5=0835ade698e0bcf8506ecda2f7b4f302"
SRC_URI = "file://myapp-init \
"
S = "${WORKDIR}"
FILESEXTRAPATHS_prepend := "${THISDIR}/files:"
inherit update-rc.d
INITSCRIPT_NAME = "myapp-init"
INITSCRIPT_PARAMS = "start 99 S ."
do_install() {
    install -d ${D}${sysconfdir}/init.d
    install -m 0755 ${S}/myapp-init ${D}${sysconfdir}/init.d/myapp-init
}
FILES_${PN} += "${sysconfdir}/*"
```

□3) 修改myapp-init脚本文件内容

脚本文件的位置在：

project-spec/meta-user/recipes-apps/
myapp-init/files/myapp-init

本文修改的内容为加载xilinx-axidma.ko module和在后台启动程序xxx_app

```
#!/bin/sh

cd /lib/modules/5.4.0-xilinx-v2020.1/extra
insmod xxx_module.ko

cd /usr/bin
./xxx_app &
## 注意，最好在此加上&，让其后台执行，不然系统会把当前命令执行完之后再进行下面的任务，
## 比如下面的任务是配置网络，这对于需要网络的开机启动尤其重要
```

完成后进行petalinux-build□使用新生成的镜像，下次就可以开机自启动了。

开机启动执行log example:

```
Hello PetaLinux World, startup test....
blink: loading out-of-tree module taints kernel.
<1>Hello module world.
<1>Module parameters were (0xdeadbeef) and "default"
blink_init: Registers mapped to mmio = 0xf09d0000
```

Registration is a success the major device number is 245.
If you want to talk to the device driver,
create a device **file** by following command.

```
mknod /dev/blink_Dev c 245 0
```

The device **file** name is important, because
the ioctl program assumes that's the file you'll use

```
#####
```

```
    Blink LED Application device_open(c7e4c6c0)
```

```
#####
```

```
*****
```

```
start LED sparkle...
```

```
*****
```

```
app led on
```

```
KERNEL PRINT : set_blink_ctrl
```

```
app led off
```

```
KERNEL PRINT : reset_blink_ctrl
```

```
app led on
```

```
KERNEL PRINT : set_blink_ctrl
```

```
app led off
```

```
KERNEL PRINT : reset_blink_ctrl
```

```
device_release(ef1d9370,c7e4c6c0)
```

```
#####
```

```
INIT: Entering runlevel: 5ation
```

```
Configuring network interfaces... IPv6: ADDRCONF(NETDEV_UP): eth0: link is  
not ready
```

```
udhcpd (v1.24.1) started
```

```
Sending discover...
```

```
Sending discover...
```

```
macb e000b000.ethernet eth0: link up (1000/Full)
```

```
IPv6: ADDRCONF(NETDEV_CHANGE): eth0: link becomes ready
```

```
Sending discover...
```

```
Sending select for 192.168.0.166...
```

```
Lease of 192.168.0.166 obtained, lease time 268435455
```

```
/etc/udhcpd.d/50default: Adding DNS 192.168.0.1
```

```
done.
```

```
Starting Dropbear SSH server: Generating key, this may take a while...
```

```
Public key portion is:
```

```
ssh-rsa
```

```
AAAAB3NzaC1yc2EAAAADAQABAAQCh7/mYSvw3pyvt0K//+5A2N2sIGUoo7ZXjChqDaBD/iV8M  
DrVQiGiyXmxkUlcrGKVeWzP
```

```
NQ0Q4i58cvtTIIJmeEQI3rM9WD7V+o/HcDRr8TlyIbK0S0KHCcHpglKwm54e01evpmX2tt4cdXfx  
dnaRhc0NjPMJq4cAutFu0y085QGwsVQ1
```

```
0FJYrdmt4Rc5T0BZdF3LtuXaVOF7mJ7aavI7vpsme1JIvzA0kGMSXH+HqY2wG4Ak6D07WdH78AaQ  
sI86vDLA1WLaPP4oCMjiLjeFKIuAbnhl
```

```
d+HuJtwvj5fx4GZcRyQ5VrwVE7anQmAu40lw/09dwQQTAJ0LX1u6Ui0V
root@petalinux_boot_from_flash
Fingerprint: md5 61:94:fc:ff:b1:94:85:d7:fa:19:26:a9:a4:92:df:7f
dropbear.
hwclock: can't open '/dev/misc/rtc': No such file or directory
Starting syslogd/klogd: done
Starting tcf-agent: OK

PetaLinux 2018.3 petalinux_boot_from_flash /dev/ttyPS0

petalinux_boot_from_flash login: random: crng init done

PetaLinux 2018.3 petalinux_boot_from_flash /dev/ttyPS0

petalinux_boot_from_flash login:
```

从上面的执行log看出来，很明显获取IP地址是在开机启动执行程序完成之后才开始的，所以一定要注意这一点。

2.9 zynq设备上运行指定驱动的app程序

在zynq fpga运行过程。

```
root@petalinux_boot_from_flash:/lib/modules/4.14.0-xilinx-v2018.3/extra# pwd
/lib/modules/4.14.0-xilinx-v2018.3/extra
root@petalinux_boot_from_flash:/lib/modules/4.14.0-xilinx-v2018.3/extra# ls
blink.ko

modprobe blink.ko      # 加载驱动
mknod /dev/blink_Dev c 245 0 # 标 dev, 这个信息根据modprobe的提示信息输入
ls /dev/blink_Dev     # 已经有dev
blinkapp              # 运用app程序
```